



## Assembly Instructions



Vertex International, Inc.  
Minnesota, USA  
1-877-2VERTEX  
www.2VERTEX.com

# SD995 Super Duty™ Log & Leaf Cart

## STEP 1

Before beginning assembly, you should have:

### Assembly Tools

Phillips Screwdriver



AND

Pliers



### Product Components




### Hardware Pack

- X 2X  
1/4" x 2" Screws
- Y 2X  
1/4" Nylock Nuts
- Z 2X  
Cotter Pins


## STEP 2

Attach Frame Assembly to Axle Bracket with (2) 2" Screws and (2) 1/4" Nylock Nuts

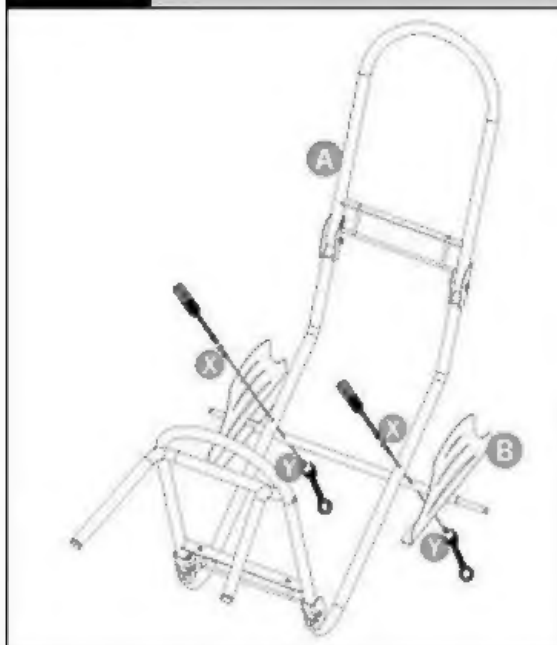

## STEP 3

Attach Wheels to Axle Bracket with (2) Cotter Pins

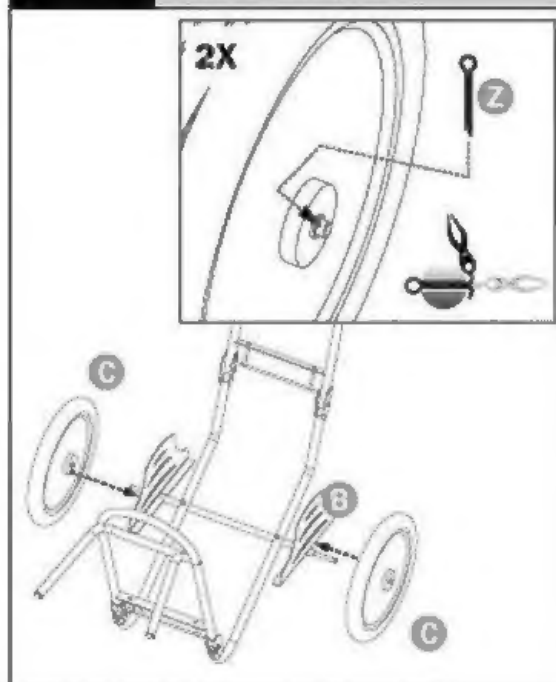

Missing a part?

Please do not return to your store. Your local retailer does

Your complete satisfaction is our #1 priority! Call us and we will

**Parts Hotline:**  
1-877-283-7830